



Update DALI Control PRO64 Gateway [SCN-DA641P.04S]

Preparation

Download the update for your DALI Control PRO64 Gateway from www.mdt.de and unpack the zip archive on your PC. The zip archive contains a .pack file.

For example: MDTDCPro_V1.0.8_partial.pack

Update

1) Open the web interface of the gateway via the IP address in a browser and log in there as administrator.

Note: When logging in for the first time, you are prompted to enter a new password. The following login data is set by default:

User name: admin Current Password: dali

\leftarrow \rightarrow C \textcircled{a} O \textcircled{a}	O- https://192.168.1.223/logir		☆	◙	⊻	lii\	≡	
	ACCOUNT LOGIN							
	User name	admin	*					
	Current Password	••••••	a.					
		bmit						

2) Switch to the [ADMINISTARTOR] area on the right.

\leftarrow \rightarrow C \textcircled{a}	🔿 🔓 🕶 http	os:// 192.168.1.2 2	3/index.shtm		☆	⊘	\mathbf{F}	hit.	≡
MDT	Project > Building	> Zone >	DALI Gateway			i	0	admir	n •
INFORMATION	COMMISSIONING	SETTINGS	CONFIGURATION	DIAGNOSIS	ADMINISTR/	ATOR			
Serial Number: (00ef:26a015a3 M	AC Address:	00-05-26-A0-15-A3	Individual Address	: 1.1.010	Firm	ware:	1.0.	8



Firmware update



3) Now click on "Actions" and select "Update Firmware".

\leftarrow \rightarrow C \textcircled{a}	O 🔓 🕶 http	os:// 192.168.1.223 /	index.shtm		☆	${igsidential}$	र ॥/ ≡
MDT	Project > Building	> Zone > (DALI Gateway			i	admin 🝷
INFORMATION	COMMISSIONING	SETTINGS	CONFIGURATION	DIAGNOSIS	ADMINISTR	RATOR	
Administrator	r						
						Acti	ons J
	Ge				erate New Dev	ice Certifi	cate
				Download Issuer Certificate			
				Upd	ate Firmware]	
				New	Admin Passwo User Passwor	ord d	

4) This area is secured with a PIN, which can be changed in the ETS application. The default PIN is: **1234**

\leftarrow \rightarrow C \textcircled{a}	0 8	0- https://192.16	5 8.1.223 /	/index.shtm		☆	⊠ ⊀	lıı\ ≡
MDT	Project > Building > Zone > DALI Gateway						<i>i</i> 8	admin 🝷
INFORMATION	COMMISSIO	NING SETT	INGS	CONFIGURATION	DIAGNOSIS	ADMINIST	RATOR	
Administrator	r							
Please enter the pin to unlock the device							Actions	
	PIN	••••	Ħ				Actions	, -
		Subm	iit					



Firmware update



5) Click on "Browse" and open the .pack file. Click on "Submit" to start the update. The update process is indicated by a rotating circle symbol and takes up to 2 minutes.

\leftrightarrow \rightarrow C \textcircled{a}	🔿 🔓 🕶 http	os:// 192.168.1.223 /	index.shtm		☆	${igodot}$	と	ı\ ≡
MDT	Project > Building > Zone > DALI Gateway							lmin 🝷
INFORMATION	COMMISSIONING	SETTINGS	CONFIGURATION	DIAGNOSIS	ADMINISTE	RATOR		
Administrato	r							
	Please select a file for	upload and after	wards press submit.					
	Please note, the upload may take up to 2 minutes.							
	C:\fakepath\MDTDCPro_V1.0.8_partial.pack Browse							
		Submit						

6) After the update, the firmware version can be checked in the -Device Information- window.

